

REMINGTON®

S-79 Series, S-80 Series

wet²straight®



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:


- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.

- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.
- Hold the straightener with the display and steam vents facing away from your scalp.



KEEP AWAY FROM CHILDREN
SAVE THESE INSTRUCTIONS

Product Features

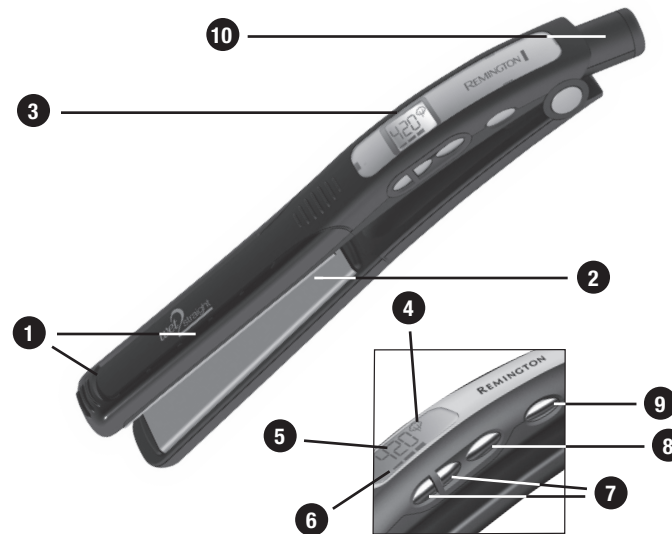

Wet2Straight Features

- | | |
|--|--|
| 1. Vent channel – releases excess moisture as steam | 6. Graphic heat setting indicator |
| 2. Tourmaline + Smooth Glide + Ceramic extra-long plates – provide high, even heat and ions for less frizz | 7. + & - temperature settings – 26 heat settings |
| 3. Digital display | 8. Wet/Dry button – change between wet & dry straightening |
| 4. Wet/dry icon | 9. On/Off button |
| 5. Numerical heat setting indicator | 10. 6 ft. swivel cord |

Unique steam vent and channel design:

Unique steam vents and channels allow this styler to be safely used on wet or dry hair. The channels extract moisture from damp hair and allow steam to escape through the vents, drying hair and sealing the cuticle at the same time. Creates salon straight, shiny hair in less time, with less damage.

Tourmaline: Tourmaline gemstones help to seal the hair cuticle, repelling humidity and static for frizz-free shine.

Smooth Glide: Non-stick Smooth Glide coating glides through any type of hair, preventing static, stickiness, and build-up of mousse gels, and hair sprays for smooth, shiny results – every time.

Ceramic: Ceramic protects against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

Ionic conditioning: Negative ions are created, neutralizing positive ions to reduce static and frizz, leaving your hair looking shiny and healthy.

Automatic shutoff:
This styler is equipped with automatic shutoff. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair. Before turning itself off the LCD will flash for 10 seconds, giving you the chance to stop the shutoff process. While the LCD is flashing, simply press the +/- button to use the styler for another 60 minutes. If no button is pressed, the unit will turn itself off when the LCD stops blinking.

How To Use

Styler Settings
Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct settings for your hair type.

Wet/Dry Setting
This styler can be used on wet or dry hair. Please turn the wet/dry setting on/off with the button on the side of the unit. Once on, you will see a steam icon in your straightener display. The setting should be "on" for use on wet hair and "off" for use on dry hair. (See table below.)

Dry Hair: 300° – 350° F
Damp Hair: 360° – 390° F
Wet Hair: 400° – 420° F



- **Turbo Boost:** (hold time about 2 seconds)
- To activate: Press "+" button and hold about 2 seconds to increase temperature to maximum 420°F setting instantly.
- To release: Press "-" button to decrease the temperature.
- **Setting Lock:** (hold time about 2 seconds)
- To activate: Press "-" button and hold. You will see the lock symbol come on in the Display.
- To release: Press "-" button until the lock images is removed from the straightener display.

Usage Tips

NOTE: Please see "Wet/Dry Setting" to the left.
Straightening Your Hair

1. Gently towel dry hair to remove excess water. Avoid rubbing hair with a towel, as this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Plug the straightener into an electrical outlet. Press and hold the on/off button until the unit turns on and the digital display begins flashing.
3. The straightener will initially heat to setting 15. Adjust the temperature using the +/- buttons. The bars on the display will flash while the unit heats up, then glow steadily when the unit has reached the selected temperature. The styler will beep three times when it is ready for use.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

- NOTE:**
- If you find that you need a higher setting while straightening your hair, simply adjust the temperature by pressing the "+" button. The unit will beep when it reaches the new temperature.
 - While straightening your hair, if you find that you need a lower setting, adjust the temperature by pressing the "-" button.
6. Take a small section of hair and comb through it with a fine-toothed comb. Pull hair down and away from your scalp, and hold it taut.
 7. **Hold the straightener with the display and steam vents facing away from your scalp.** Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.
 8. To speed up drying at the roots, you may wish to run the styler over the first few inches of hair nearest the root several times. Repeatedly run the unit smoothly down the entire strand until hair is fully dried. **(NOTE: The unit may make a steaming/hissing noise when used on damp hair. This is okay! The unique design of this styler will channel the moisture away from hair and out the steam vents.)**
 9. Repeat with all sections of your hair, working with the underneath layers first, then the top and sides, until hair is fully dried.
 10. When you are finished styling, press and hold the on/off button to turn the unit off, unplug it, and allow it to cool before storing.

Maintenance

Cleaning
Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

Storage
Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Limited Two-Year Warranty
Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

- This warranty does not cover products damaged by the following:
- Accident, misuse, abuse or alteration of the product
 - Servicing by unauthorized persons
 - Use with unauthorized accessories
 - Connecting it to incorrect current and voltage
 - Wrapping cord around appliance causing premature wear & breakage
 - Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer
If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US.

120 VAC, 60 Hz

Questions or comments: Call 800-736-4648 in the US or visit www.RemingtonProducts.com
Dist. by: Spectrum Brands, Inc., Madison, WI 53711
® Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

© 2011 SBI 07/11 Job #CS42316

Manufactured to Remington's specifications in the PRC. **T22-33266**

